



ACOUSTIC AMBIENCE AMPLIFIER (AA25) OPERATION MANUAL



AA25 CONTROLS

CHANNEL 1

INPUT.....XLR connector for microphone cable input

VOLUME.....Adjusts the volume of the microphone

CHANNEL 2

INPUT..... 1/4" jack for instrument input

VOLUME.....Adjusts the volume of the instrument

BASS Controls boost of low frequencies, for a deeper sound

MIDDLE Controls boost of midrange frequencies, for a more present sound

TREBLE Controls boost of high frequencies, for a brighter sound

CHORUS Turns chorus effect on or off

SPEED Controls the speed of the chorus effect, from slowest to fastest

CD VOLUME Adjusts the level of incoming CD or other external stereo signal

CD INPUT Stereo RCA connector for incoming CD or other external stereo signal

LINE OUT..... For connecting AA25 to the input of an external PA amplifier

PHONES For headphone monitoring; deactivates AA25 speaker when used

POWER..... Turns AA25 on or off

AA25 SPECIFICATIONS

OUTPUT POWER25 watts RMS

SPEAKER8" 8-Ohm driver plus 2.5" tweeter

DIMENSIONS463mm W, 375mm H, 260mm D

POWER CONSUMPTION35W

WARNING: *If your AA25 fails to function, please contact your dealer or distributor. Do not remove the back panel of the amplifier, while it is connected to a wall socket, under any circumstances.*



ACOUSTIC AMBIENCE AMPLIFIER (AA25) IMPORTANT SAFETY INSTRUCTIONS

Read, retain, and follow all instructions. Heed all warnings.

Unplug this amplifier during lightning storms, or when unused for long periods.

Do not drip nor splash liquids onto, nor place liquid-filled containers on, the amplifier.

This amplifier must be located away from heat sources such as radiators, heat registers, or other appliances that produce heat.

Only connect the power supply cord to an earth-grounded AC receptacle.

Unplug the power supply cord before cleaning the unit exterior (use a dry cloth only).

Maintain at least 6 inches (15.25 cm) of unobstructed air space behind the unit to allow for proper ventilation and cooling of the unit. Do not block any ventilation openings.

The power supply cord of this amplifier should be unplugged from the outlet when left unused for a long period of time, or during electrical storms.

Protect the power supply cord from being stepped on, cut, pinched or abraded.

This product may be equipped with a polarized plug (with one blade wider than the other). This is a safety feature. If you are unable to insert the plug into the outlet, contact an electrician to replace your obsolete outlet. Do not defeat the safety purpose of this plug.

This amplifier should be serviced by qualified service personnel when:

- the power supply cord, or the plug, has been damaged
- objects have fallen into the amplifier
- or liquid has been spilled onto the amplifier
- the amplifier has been exposed to rain or moisture
- the amplifier does not appear to operate normally
- the amplifier has been dropped
- the amplifier's enclosure has been damaged

CAUTION: No user serviceable parts inside, refer servicing to qualified personnel only.

WARNING: To reduce the risk of fire or electric shock, do not expose this amplifier to rain or moisture.