




# UKULELE SUITCASE AMPLIFIER (UK-5) OPERATION MANUAL

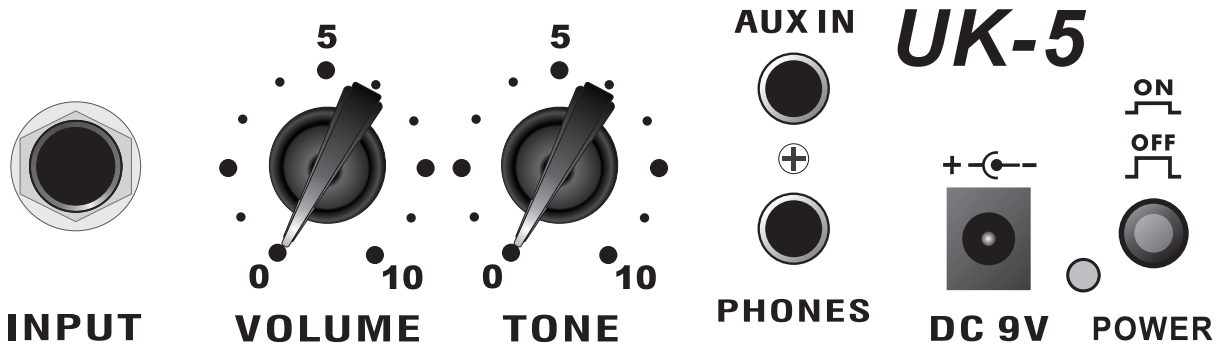

## UK-5 CONTROLS

- INPUT**..... 1/4" jack for instrument input
- VOLUME**..... Adjusts the volume of the instrument
- TONE** ..... Controls frequency output, from darker to brighter
- PHONES** ..... For headphone monitoring; deactivates UK-5 speaker when used
- AUX IN**..... 1/8" connector for incoming external stereo signal
- DC JACK**..... connector for included 9V DC adapter (saves 9V battery when in use)
- POWER** ..... Turns UK-5 on or off

## UK-5 SPECIFICATIONS

- OUTPUT POWER** .....5 watts RMS
- SPEAKER** .....5" 8-Ohm driver
- DIMENSIONS** .....350mm W, 210mm H, 125mm D
- WEIGHT** .....3 Kg
- BATTERY** .....9-volt (6F22 type)

**WARNING:** If your UK-5 fails to function, please contact your dealer or distributor. **Do not remove the back panel of the amplifier, while it is connected to a wall socket, under any circumstances.**